

## **Wolverine MM100 and MM100-PRO Moviemaker Firmware**

### **How to upgrade firmware**

1. Download the firmware named "FWDV180N.bin" to the base level or root directory of a SDHC memory card.
2. Insert the SDHC card in MovieMaker and press the power button.
3. The red LED light below the power button will flash on and off. Wait for about 25 seconds. The blue screen with Wolverine logo will come up.
4. Turn off the MovieMake and eject the SDHC card. Use computer to delete the firmware FWDV180N.bin from the card.
5. Mount reels on the MovieMaker properly then insert a SDHC memory card.
6. Power on the MovieMaker.