


# MAC-CABLE-CHECK™

## Instruction Manual

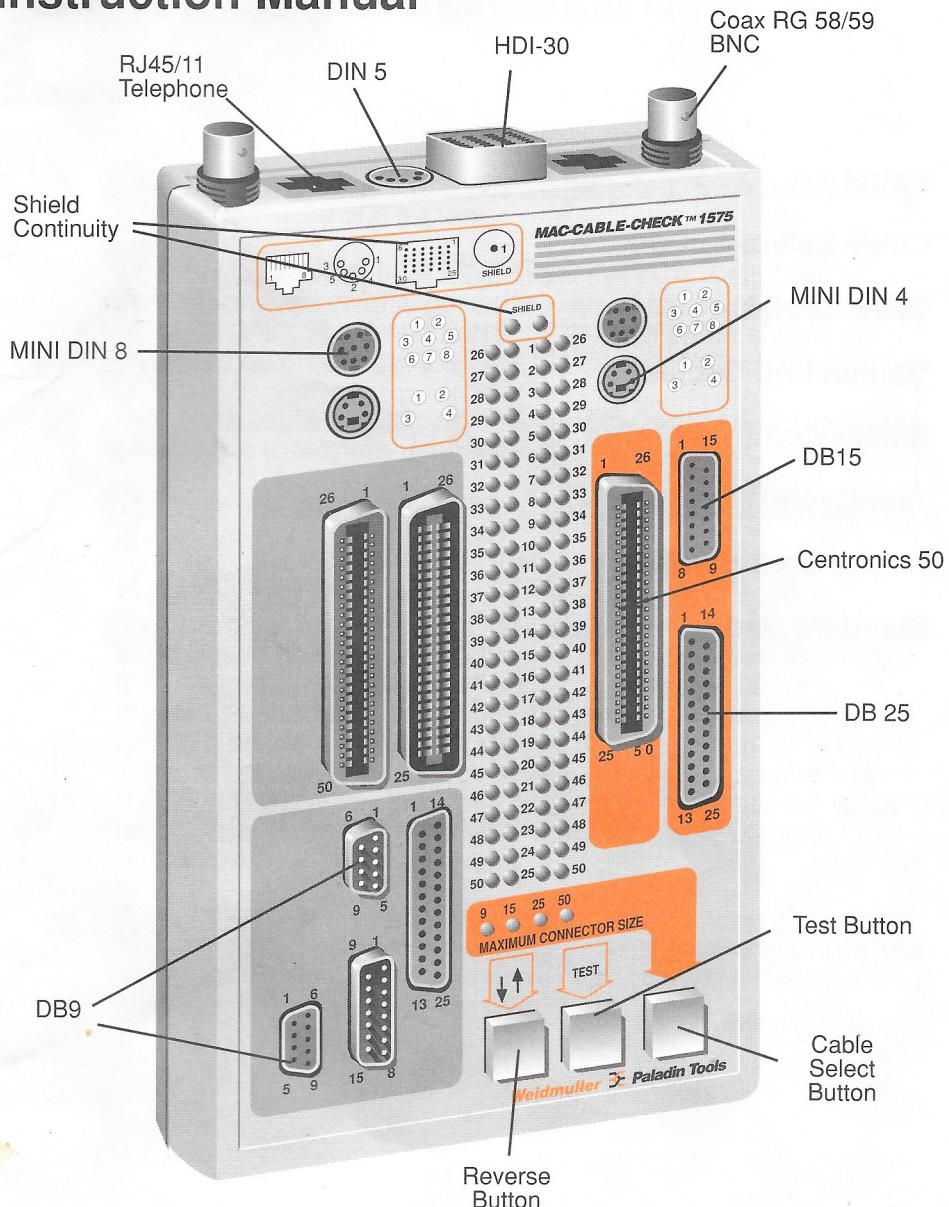

**1575**

**Weidmuller**  **Paladin Tools**

# Contents

Battery	1
Cable Select Button	3
Coax Cables	6
Connecting Cables	2
Shield Continuity	4
Test Cycle	5
Wiring Configuration	6-8
Standard Cable Descriptions	7

MAC-CABLE-CHECK™ provides a simple check and wiring configuration for any combination of DB9, DB15, DB 25, Centronics 50, Mini Din 4/8, Din 5, HDI 30, Coax RG 58/59 BNC and RJ45 Telephone plugs.

## Operation.


- 1 Check that the battery has been connected, Switch 'ON'. Only use a standard 9 volt battery.
- 2 Connect your cable to MAC-CABLE-CHECK™ with the connections attached to opposite sides of the unit (green-orange) note the BNC, RJ45 and DINS on the end panel should be regarded as green and the HDI, RJ45 and BNC as the orange.
- 3 Press the cable select button repeatedly until the red indicator selects the maximum connector size to be tested.
- 4 The instrument will indicate the shield connected if both red lights are on.
- 5 Press the TEST button to cycle through each individual connection to test for continuity. When there is a red light on the orange side it shows the continuity and wiring configuration of the red light on the green side. For some cables there are a number of red lights that will indicate multiple connections. No red light on the orange side means no connection. NOTE: The lights will go out if the selection is discontinued to save battery life. To restart, press the TEST button and continue the existing test or hold down the reverse button to reverse the test procedure.
- 6 The correct wiring configuration for your cable can either be found in the examples of the most popular cables shown in the manual or by consulting your equipment manuals. See the cable guide for further information.

**APPLICATION  
AND  
CABLE TYPE**

	DB 25M	DB 15M	DB 15F	DB 9M	DB 9F	CENTR 50F	CENTR 50M	MINI DIN 4M	MINI DIN 8M	HDI 30	DIN 5M	RG58 BNC
Apple™ IIC to Imagewriter II										●		●
Apple™ IIC & Laser 128 to printers	●	●										
Macintosh® Powerbook to SCSI drive	●											●
Apple™ Ile - Hayes Modems	●									●		
Macintosh® to Mitsubishi Diamond Scan Monitor	●	●										
SCSI Peripheral Cable									●	●		
Macintosh® computer to monitor			●									(5)
Macintosh® video extension			●	●								
Macintosh® 128/512K to Imagewriter I	●					●						
Macintosh® to SCSI	●								●			
Apple™ IIC to Hayes modem	●											●
Macintosh® to Imagewriter serial	●									●		
Macintosh® PowerBook to SCSI drive								●			●	
Macintosh® to Imagewriter II										●	●	
Macintosh® to VGA monitor			●									(4)
Macintosh® to PC Communications						●				●		
Macintosh® to Imagewriter II					●					●		
Apple™ Desktop bus										●	●	
Macintosh® to NEC MULTISYNC II		●		●								
NUVISTA TARGA VIDEO					●					●		
SCSI Ext. Cable See 50 FTO 50F								●				


## DIN 5M-MINI DIN 8M Apple™ IIc to Imagewriter II

### DIN 5M

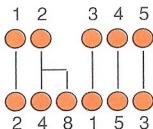


### MINI DIN 8M

**DB25M - DB25M**  
**Apple™ IIc & Laser 128 series**  
**to printers and peripheral devices**

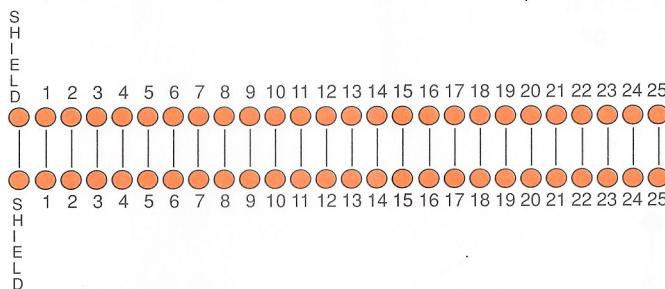

**DB 25 - HDI 30**  
**Macintosh® Powerbook computer to**  
**SCSI drive and peripherals**


### DB 25

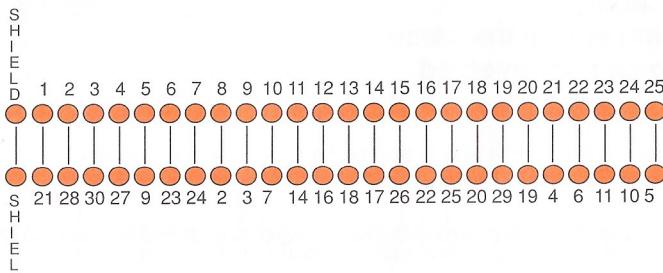

### HDI-30

# DB 25M-Mini DIN 8M Apple™ IIe-Hayes Modems


## DB 25

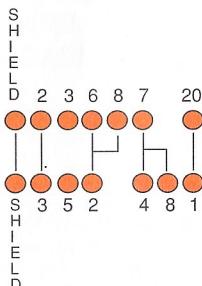

## MINI DIN 8M


DB 25M - DB 15M  
Macintosh® to Mitsubishi  
Diamond scan monitor

## DB 25M

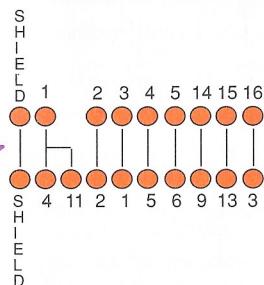


## DBI 5M

Centronics 50M/M  
SCSI Peripheral Cable  
Note: with both connectors the same  
relationship can be reversed

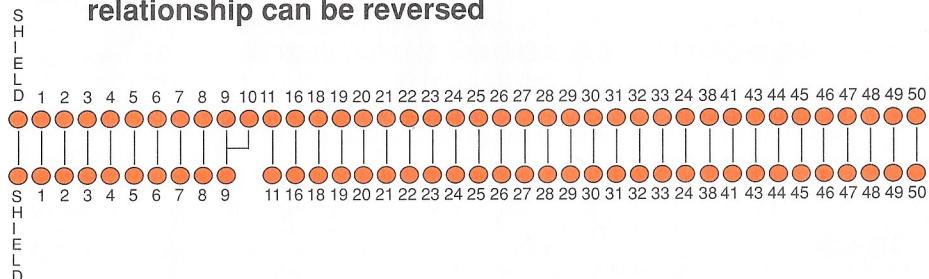


## DB 15M - 5 BNC Macintosh® computer to monitor

### DB 15M

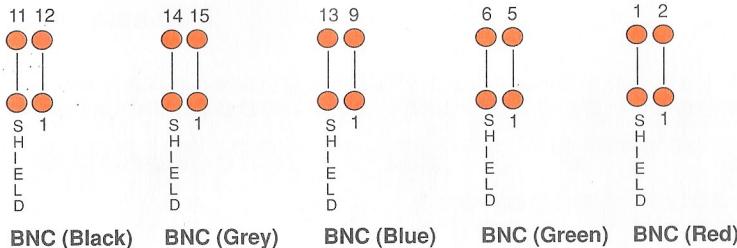

## DB 15M - DB15F Macintosh® video extension cable


### DB 15M

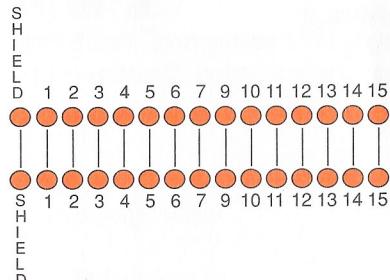

### DB 15F

## DB 9M - DB25M Macintosh® 128/512K to Imagewriter I

### DB 9M

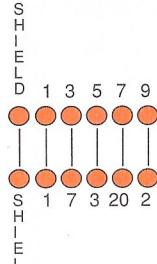


### DB 25M

## **Centronics 50M - DB 25M**

**Macintosh® computer to SCSI drive and peripherals**

### **Centronics 50M**

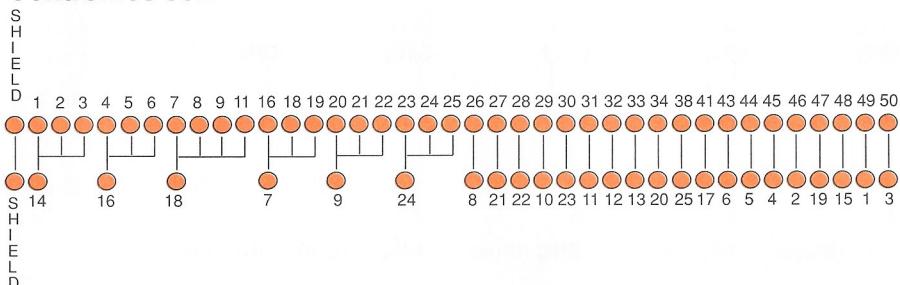


### **DB 25M**

## **DB 25M - DIN 5M**

**Apple™ IIc to Hayes modem and peripherals**

### **DB 25M**

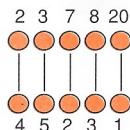


### **DIN 5M**

## **DB 25 - MINI DIN 8M**

**Macintosh® computer to Imagewriter I serial printers**


### **DB 25**

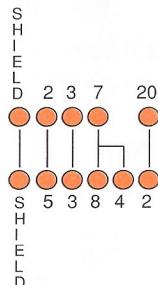

### **MINI DIN 8M**

**Centronics 50M - HDI 30**  
Macintosh® PowerBook computer to SCSI  
drive and peripherals


**Centronics 50M**

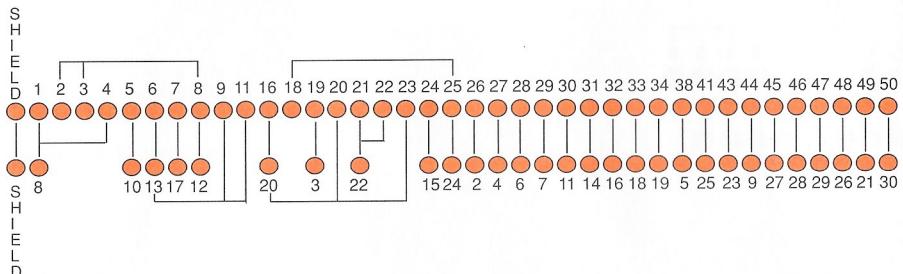

**HDI 30**

**MINI DIN 8M/M**

Macintosh® computer to Imagewriter II, HP deskwriters, Stylewriter,  
Laserwriter II, printers and peripherals

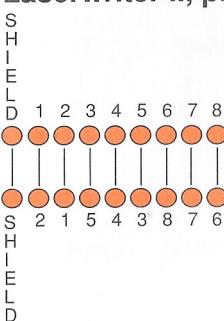


**DB 15M - 4 BNC**

Macintosh® computer to VGA monitor


**DB 15M**




BNC (Black)

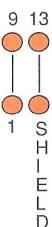

BNC (Blue)

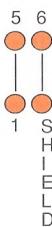


BNC (Green)

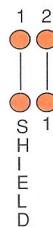

BNC (Red)

## **DB 9F - MINI DIN 8M** **Macintosh® to PC communications**

### **MINI DIN 8M**

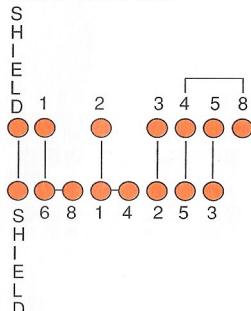


### **DB 9F**

## **DB 9M - MINI DIN 8M**

**Macintosh® 128/512K to Imagewriter II/Modem cable**

### **MINI DIN 8M**

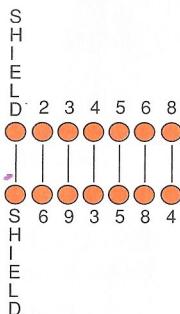


### **DB 9M**

## **MINI DIN 4M/M**

**Apple™ desktop bus cable**

### **MINI DIN 4M**

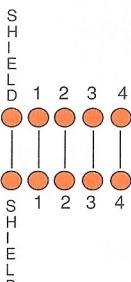


### **MINI DIN 4M**

## DB 15M - DB 9M

Macintosh® to NEC MULTISYNC II, III monitor cable

### DB 15M

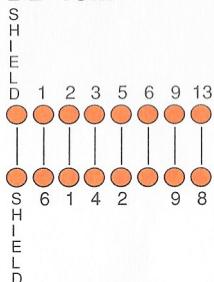


### DB 9M


## DB 9M - BNC 4 & MINI DIN 4M

Nuvista Targa Video Applications


DB 9

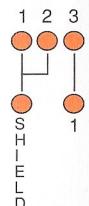


DB 9

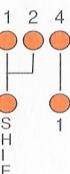


DB 9

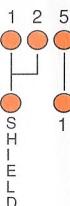

DB 9

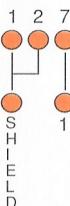

DB 9

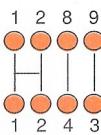

BNC (Red)

BNC (Green)

BNC (Blue)

BNC (Grey)

Mini Din 4

