



Your **definitive** source
for quality pre-owned
equipment.

Artisan Technology Group

(217) 352-9330 | sales@artisanng.com | artisanng.com

Full-service, independent repair center

with experienced engineers and technicians on staff.

We buy your excess, underutilized, and idle equipment

along with credit for buybacks and trade-ins.

Custom engineering

so your equipment works exactly as you specify.

- Critical and expedited services
- In stock / Ready-to-ship
- Leasing / Rentals / Demos
- ITAR-certified secure asset solutions

Expert team | Trust guarantee | 100% satisfaction

All trademarks, brand names, and brands appearing herein are the property of their respective owners.

Find the Metcal SP440 at our website: **Click [HERE](#)**



METCAL SP440 SYSTEM USER GUIDE

BENUTZERHANDBUCH FÜR METCAL SP440 SYSTEM

MANUEL D'UTILISATION METCAL SP440

MANUALE DI ISTRUZIONI PER L' USO DI METCAL SP440

METCAL
*The **SmartHeat** Company™*

M E T C A L S P 4 4 0 S Y S T E M U S E R G U I D E

SYSTEM ASSEMBLY 1

TIME-OUT FEATURE 1

AUTO-OFF FEATURE 2

NO CALIBRATION REQUIRED 2

CHOOSING THE CORRECT DESOLDER CARTRIDGE 3

CHOOSING THE CORRECT GEOMETRY 3

CHOOSING THE CORRECT TEMPERATURE (SERIES) 3

INSERTING TIP CARTRIDGES 3

TURNING THE UNIT ON 4

REPLACING DESOLDERING TIP CARTRIDGES 4

PROPER DESOLDERING TECHNIQUE..... 4

DESOLDER SYSTEM CARE

 REPLACING THE LINER AND FILTER..... 5

 REPLACING THE COIL ASSEMBLY 5

 REPLACING THE SEAL..... 6

 REPLACING THE VALVE BODY ASSEMBLY 6

TROUBLESHOOTING GUIDE7

SYSTEM SPECIFICATIONS8

WARRANTY/RETURN PROCEDURE.....8

TECHNICAL AND CUSTOMER SERVICES: HERE TO HELP YOU

If you have difficulty setting up your system, diagnosing problems, or replacing any part, please give your local Metcal representative a call.

In addition, we have data sheets available on tip cartridges and accessories for this and other Metcal Systems. Please make sure you have returned the product card that shipped with this system so that we can send you these data sheets, as well as product updates and our technical support newsletter. If you have lost your card, or if you are not the original user of this system, please give us a call so that we can register you.



United Kingdom & European Headquarters
Eagle Close, Chandlers Ford
Hampshire, SO53 4NF
England
Tel: +44 (0) 2380 489 000
Fax: +44 (0) 2380 489 109
Internet: www.metcal.com

AN OK INTERNATIONAL COMPANY

SYSTEM ASSEMBLY

The Metcal SP440 Self-Contained Desolder System consists of a single port power supply, desolder workstand with wiping sponge, and a desolder handpiece that uses replaceable tip cartridges. (Tip cartridges are sold separately from the system.)


The power supply features a port for the desolder handpiece, an on/off switch, and a green "Power On" indicator light (this light turns amber in "Auto-Off" or "Time Out" mode).

The desolder handpiece is the heart of the desolder system. The tool consists of the main handgrip and vacuum trigger, the coil assembly, the solder collection chamber, and the valve body assembly. The paper solder collection filter and main fume filter are located inside the solder collection chamber in the handpiece. The vacuum hose and the electrical cord connect the handpiece to the power supply. Both cords are burn resistant and ESD-safe.

To attach the handpiece:


1. Insert the cord connector into the power supply port on the front of the unit.
2. Turn the connector 1/4 turn clockwise, or until it locks.

The inline filter is located in the back of the system, connecting to the vacuum hose between the handpiece and the power supply. Remove the plug before connecting the inline filter to the vacuum hose and power supply.

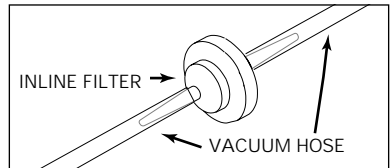

To attach the desolder handpiece vacuum line and inline filter:

1. Make sure the power cord is NOT connected to the unit.
2. Attach the vacuum hose to the inline filter on the back of the power supply.
3. Attach the power cord to the receptacle on the back underside of the power supply.

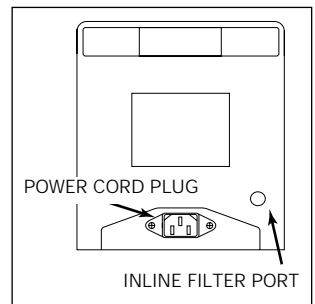

Plug the power cord into a grounded wall socket of the appropriately rated input line voltage.

Note: The DSG2 desolder handpiece IS not compatible with the SP200. Similarly, the HC1 solder handpiece and HC2 solder handpiece cannot be used with the SP440.

TIME-OUT FEATURE

One of the most common and needless causes of shortened tip cartridge life is leaving the power supply on during breaks or unattended for long periods of time. This is one of the primary reasons Metcal advocates shutting your system off when not in use. However, we realize that remembering to turn your system off can be the furthest thing from your mind.

So, the SP440 has an automatic Time-Out feature. This feature works by shutting off the

AUTO-OFF FEATURE

The SP440 power supply has a built-in Auto-Off feature. In the event that there is an interruption in the ground circuit path, the Auto-Off feature will shut off the power supply. Just as in the "Time Out" feature, the green light will turn amber.

Conditions that will cause the Auto-Off feature to trigger are:

- Coil assembly not installed in handpiece
- No handpiece connected to power supply
- Open circuit caused by a bad coil assembly or handpiece
- Short circuit caused by a bad coil assembly or handpiece

To reset the system, first correct the fault condition, then push the on/off switch "off", then back "on". (If the problem is not fixed first, the Auto-Off feature will shut off the power supply port after reset, and the power light will continue to be amber rather than green)

NO CALIBRATION REQUIRED

METCAL® SMARTHEAT® SOLDERING, DESOLDERING, AND REWORK SYSTEMS DO NOT REQUIRE SYSTEM CALIBRATION FOR TEMPERATURE.

A Metcal System is comprised of a power supply with handpiece/cord assembly and a tip cartridge. Each cartridge is equipped with a self-regulating heater, which senses its own temperature and tightly maintains its pre-set idle temperature for the life of the cartridge. The heater temperature is set by the metallurgical properties of the heater material. It cannot be adjusted, and does not require any adjustment.

The power supply with handpiece/cord assembly does not contain the heater or any tip temperature sensors, but simply provides the current to the heater. Any expected power supply variability does not adversely affect its ability to maintain the necessary current to the heater. There are no adjustments to be made.

The term calibration implies that because of inherent shift over time in a system, periodic adjustment must be made to maintain performance. Calibration schedules are normally based on anticipating when an out-of-tolerance condition will occur and calibrating or adjusting prior to this event. In a Metcal System, there is nothing to adjust, so the system cannot be changed from its initial state. Therefore, NO CALIBRATION is required.

Those companies or individuals requiring periodic verification of system performance should call their local Metcal representative for a copy of Metcal's ISO 9000 Tech Note.

Call your local Metcal Technical Support office with any questions. In addition, a signed letter of "No Calibration Required" is also available.

CHOOSING THE CORRECT DESOLDER CARTRIDGE

Proper tip cartridge selection is important for getting the best results. Choosing the right tip cartridge will maximize your performance at the lowest possible temperature. Since changing tip cartridges is so quick and easy, there is no need to compromise.



CHOOSING THE CORRECT GEOMETRY

Select a tip cartridge with an inside diameter larger than the lead diameter, and an outside diameter that is approximately the same size as the pad.



CHOOSING THE CORRECT TEMPERATURE (SERIES)

The SP440 features high durability SDC desolder cartridges, designed for high heat transfer, making desoldering on multi-layer boards much easier. Desolder cartridges are available in two temperature ranges (600 and 700 Series). A typical board usually requires a 700 Series tip cartridge. Try a 600 Series tip cartridge first for thermally sensitive components or small single-

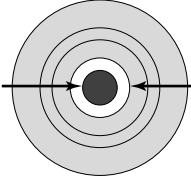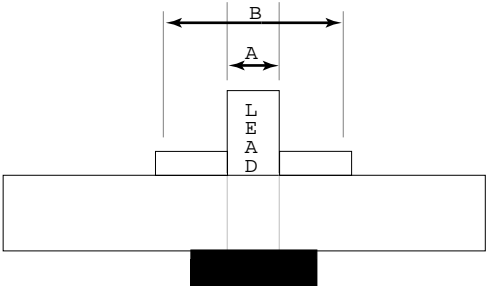Inside Diameter	Outside Diameter	PART NUMBER	
		600 Series	700 Series
(A)	(B)		
0.6mm	1.4mm	SDC-602	SDC-702
0.8mm	1.5mm	SDC-603	SDC-703
1.0mm	1.8mm	SDC-604	SDC-704


ACCESSORIES

- DP-VP2 Vacuum pump for SP440-21
- DP-DSG2 Desolder Tool assembly, pencil grip
- DP-CA2 Coil assembly
- DP-CC Solder Collection chamber
- DP-FIL Filter Pack:
 - 1 In-line filter, polypropylene
 - 1 Cleaning brush
 - 12 Flux filters - white
 - 24 Paper filters for the collection

chamber

INSERTING TIP CARTRIDGES

Insert a desolder tip cartridge into the desolder handpiece by pushing it in until it

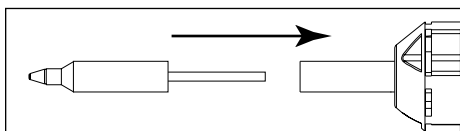

TURNING THE UNIT ON

To turn the unit on, press the front part of the switch down. The green LED will light up. If it does not, or if the light is amber, consult the troubleshooting guide.

REPLACING DESOLDERING TIP CARTRIDGES

1. Turn the system off. Be sure the green LED light is off before proceeding.

CAUTION: THE TIP CARTRIDGE MAY BE HOT!

2. Pull out the cartridge using the Tip Cartridge Removal Pad. A Cartridge Pad should be attached to your handpiece cord. If not, contact your supervisor, check your company's tool crib, or call Metcal Customer Service. DO NOT USE METAL TOOLS (PLIERS, ETC) TO REMOVE CARTRIDGES. METAL TOOLS CAN DAMAGE THE CARTRIDGE OR COIL ASSEMBLY!
3. Push a new tip cartridge into the handpiece.
4. Turn the unit on. The new tip cartridge will heat up to temperature in less than 45 seconds.



PROPER DESOLDERING TECHNIQUE

1. Choose the correct tip cartridge for the job. Too small a tip cartridge, and you will not get an efficient vacuum seal. If your tip cartridge is too large, overextending the pad, you could damage the board.
2. If the board has been conformal coated, you may or may not need to remove this coating. Usually, you can desolder through the coating. IF YOU DESOLDER THROUGH CONFORMAL COATING, CLEAN THE INSIDE OF THE TIP FREQUENTLY WITH A TIP CLEANER AS THESE COATINGS CAN HARDEN AND CRYSTALLIZE ON THE INSIDE OF THE TIP, CREATING A BLOCKAGE. Usually when working with conformal coated boards, you need only score the conformal coating on the top side along the top fillet so the solder is allowed to be pulled through from one side and out the other.
3. Flux will minimize dwell time and aid in heat transfer, but will require more frequent replacement of your fume filter.
4. Whenever possible, work with the board in an upright or angled (not flat) position so you can see the distance from the tip cartridge to the pad. The tip cartridge should be perpendicular to the board, allowing sufficient heat transfer and vacuum to develop.
5. Contact the fillet. As you wait, the fillet will melt and the solder will wet the tip. This is your vacuum seal. Now move the tip closer to the pad.
6. Move the lead back and forth with the tip. This will aid heat transfer.
7. Depress the trigger. One long pull while moving the lead will typically be sufficient. A short burst may not remove all the solder and may result in a lead that is resoldered to the board.
8. Look at the work. If the hole is still filled with solder, don't try to immediately desolder it again. Once any solder has been removed, you must go back and resolder. Air in the through-hole acts as an insulator and will not allow heat transfer through to the other side.


REPLACING THE LINER AND FILTER

The power supply does not need to be turned off to replace the liner and filter. However, as a safety measure, you may want to turn off the desolder tool when changing the solder collection and main fume filters. To ensure proper vacuum, change the filters whenever the vacuum seems weak. NEVER USE THE DESOLDER TOOL WITHOUT A SOLDER COLLECTION AND FUME FILTER! DOING SO CAN CAUSE FAILURE OF THE VALVE BODY AND VACUUM

1. Hold the tool with the tip pointing up.
2. Pull the collection chamber down until the grey latch pops out.
3. Pull the collection chamber out.
4. Pull the liner out. Replace if full.
5. Remove the filter. Replace if heavily discolored.

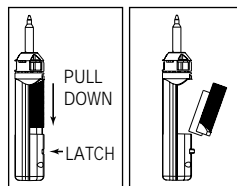

6. To replace the liner, carefully fold the paper liner, making sure the perforated fingers at the bottom are folded over.
7. Insert the collection liner into the chamber, making sure it is in the front (top) of the chamber (follow the etched drawing on the outside of the chamber). Then, insert the fume filter.





8. Put the chamber back into the handpiece. Push collection chamber to the front of the handpiece to ensure proper mating with the coil assembly seal. Press the grey latch to lock.

REPLACING THE COIL ASSEMBLY

Replace the coil assembly when tip cartridges fail to heat.

To replace the coil assembly:

1. Turn the power off to the desolder tool.
2. Remove the handpiece/cord from the power supply.
3. There are three screws at the top of the coil assembly. Remove them with the small hex head allen wrench that is included with the new coil assembly.
4. Pull off the coil assembly by pulling it straight out.
5. Insert a new coil assembly, lining up the pins to the connectors.
6. Press in the new coil assembly, taking care not to force or bend the pins.
7. Screw down the three screws included with the new coil assembly.

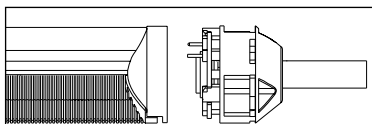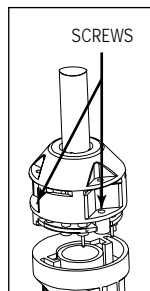


REPLACING THE SEAL

You should check the seal periodically to make sure there are no cracks or gaps. Loss of vacuum or repeated vacuum cycling may also be a sign of a worn seal.

To replace the seal:



1. Remove the coil assembly with a 5/64" hex wrench as described earlier.
2. Pry the seal out with a small screwdriver.
3. Insert a new seal and press in until you feel a "click". Make sure there is a tight fit between the seal and plate with no noticeable gaps by spinning the seal. It should spin freely.
4. Replace the coil assembly.

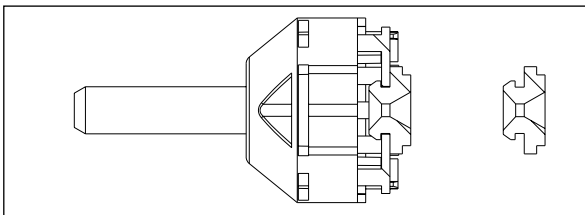

REPLACING THE VALVE BODY ASSEMBLY

To replace the valve body assembly, turn the power off to the desolder tool. Remove the DSG2 desolder handpiece/cord from the power supply.

1. Remove the collection chamber (see "removing the collection chamber" if you need assistance).
2. Check the valve for solder balls that can be removed. Remove any solder balls.
3. If they cannot be removed, the valve body must be replaced. Remove the two screws holding the valve body in place.
4. Unclip the clips that hold the vacuum hose to the electrical cord.
5. Pull the valve up and remove it (the vacuum hose is attached and will come off with the valve).
6. Line up the back of the new valve body assembly with the desolder tool. Be sure to keep the trigger spring straight.
7. Press down and screw into place.
8. Clip the new vacuum hose to the handpiece.
9. Replace the collection chamber. Push collection chamber to the front of the handpiece to ensure proper mating with coil assembly seal. Press the grey latch to lock it in place.

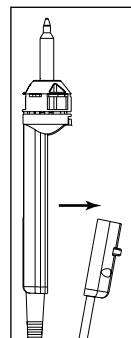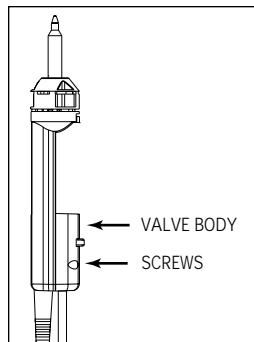

TROUBLESHOOTING GUIDE

If these steps do not result in proper performance, call Metcal Technical Services.

Tip Cartridge Won't Heat

1. Be sure the tip cartridge is pushed all the way into the handpiece.
2. Check that the handpiece connector is tightened securely to the power supply.
3. If the green LED is not lit or is amber, see the section "Power Supply Light is Amber or Off".
4. Try replacing the coil assembly.

POWER SUPPLY LIGHT IS AMBER OR OFF

1. If the power supply light is off, make sure the power supply cord is properly connected to the wall outlet, that the cord is securely connected to the back of the unit, and that there is power to the wall outlet.
2. If the power supply light is amber, and you have not used the system for more than 20 minutes, the Time-Out feature may have been tripped. To reset this feature, press the on/off rocker switch forward and release.
3. If the light is still amber, the Auto-Off protection feature may have been tripped. Conditions that can trigger the Auto-Off and that should be checked are:
 - Loose handpiece connection to power supply
 - Bad coil assembly or no coil assembly installed
 - Bad handpiece

IF SYSTEM IS ON BUT VACUUM IS LOW OR NONEXISTENT

1. A full liner, fume filter, or inline filter is usually the cause of low vacuum. Check and replace if necessary.
2. Check the vacuum hose for kinks. Straighten any kinked lines.
3. Check the desolder cartridge tip to be sure nothing is blocking the inside. If a solder ball, hardened conformal coating or flux is trapped in the tip, clean the tip by inserting the appropriately sized tip cleaner in the tip and pressing through.
4. Check to be sure the coil assembly seal is securely seated around the tailpipe. There should be no gaps. If the seal is worn, you should replace it.
5. The valve body may be clogged. Check and replace if necessary.
6. Ensure that the collection chamber is properly seated against the front of the unit, so that it makes contact with the seal.

VACUUM PUMP CYCLES ON AND OFF CONTINUOUSLY

1. Check the vacuum hose for leakage and check to be sure it is attached to the back of the unit, and the line filter connector is tight.
2. Check the valve body assembly. Replace or clean if necessary.
3. Check and replace check valve.

SYSTEM SPECIFICATIONS

POWER SUPPLY		POWER CORD (3-WIRE)	6 ft (183 cm) - 18/3 SJT
TIP-TO-GROUND POTENTIAL	< 2 mV, true RMS, 50-500 Hz	DESOLDER TOOL	
TIP-TO-GROUND RESISTANCE	< 2 ohms, DC, unit on	VACUUM RISE TIME	25 ms to 12 inches Hg
IDLE TEMPERATURE STABILITY	$\pm 2^{\circ}\text{F}$ ($\pm 1.1^{\circ}\text{C}$), still air	HANDPIECE ASSY	5 ft (152 cm)
AMBIENT OPERATING TEMP	50 - 104 $^{\circ}\text{F}$ (10 - 40 $^{\circ}\text{C}$)		carbon loaded silicone, shielded
MAX ENCLOSURE TEMP	150 $^{\circ}\text{F}$ (65 $^{\circ}\text{C}$)		
INPUT LINE VOLTAGE		DIMENSIONS	
SP440-11	108-132 VAC	LENGTH X WIDTH X HEIGHT	8.0" x 6.0" x 7.0"
SP440-12	90-110 VAC		20.3 x 15.2 x 17.8 cm
SP440-21	216-264 VAC	WEIGHT (TOTAL UNIT)	9.0 lbs (4.1 kg)
INPUT LINE FREQUENCY	45 - 70 Hz	WEIGHT (DESOLDER TOOL)	8.0 oz (227 g)
NOMINAL OUTPUT	50 Watts @ 72 $^{\circ}\text{F}$ (22 $^{\circ}\text{C}$) ambient	STANDARDS COMPLIANCE	
OUTPUT FREQUENCY	470 KHz	MIL-STD-2000, -1686, -45743E , WS-6536D and E	
TIME OUT FEATURE	After 25-30 minutes idle time	ESD 105-1011 ohm/square per ASTM D257 (ESD 105-109 ohm/square where possible)	

METCAL SOLDERING & DESOLDERING SYSTEMS WARRANTY

Metcal, Inc. warrants Power Supplies against any defects in materials or workmanship for two (2) years from the date of purchase by the original owner. The DSG2 Desolder Tool is warranted against any defects in materials or workmanship for one (1) year from the date of purchase by the original owner. Metcal warrants all other products except consumables against any defects in materials or workmanship for one (1) year from the date of purchase by the original owner.

This Warranty excludes normal maintenance and shall not apply to any misused, abused, altered or damaged items. If the product should become defective within the warranty period, Metcal, Inc., will repair or replace it free of charge at its sole option. The replacement item(s) will be shipped, freight prepaid, to the original purchaser.

The warranty period will start from the date of purchase. If the date of purchase cannot be substantiated the date of manufacture will be used as the start of the warranty period.

Service After Warranty

Metcal will repair or replace (at Metcal's sole option) a power supply that fails in normal use within three (3) years after the expiration of the two-year warranty at the then current repair or exchange rate. To return a failed power supply for repair or replacement, follow the steps outlined below. This offer does not apply to any previously opened, modified, repaired, altered, misused or damaged power supply.

Replaceable coil Assembly Warranty

Metcal warrants that the coil assembly will operate according to specifications for a minimum of 1,000 hours. A coil assembly that fails to heat for at least 1,000 hours operation will be replaced at no charge.

Replaceable Tip Cartridge Warranty

Metcal warrants that the heater in its Tip Cartridges will operate according to specifications for the lifetime of the plating. A Tip Cartridge that fails to heat for the lifetime of the plating will be replaced at no charge. For replacement, follow the steps outlined below. The replacements will be shipped, freight prepaid, to the original purchaser. This Warranty shall not apply to any misused, abused, altered or damaged Tip Cartridges.

This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.

Return Procedure

1. Call your appropriate Metcal office to obtain a Returned Material Authorization (RMA) number.
2. Ship materials, freight prepaid, to the appropriate Metcal office with the RMA number clearly visible on the outside of the package.

United Kingdom & European Headquarters

Tel: +44 (0) 2380 489000

Fax: +44 (0) 2380 489109

Deutschland GmbH

Tel: +49 (0) 6142 9360 0

Fax: +49 (0) 6142 9360 50

France SA

Tel: +33 (0)4 72 08 75 75

Fax: +33 (0)4 72 08 75 70

Italia SPA

Tel: +39 02 90111105

Fax: +39 02 90111147



A New Force In Electronics Manufacturing

- **OK International, Inc.**
4 Executive Plaza,
Yonkers, New York 10701 USA
Tel: +1 (914) 969 6800
Fax: +1 (914) 969 6650
- **USA West Coast**
1530 O'Brien Drive,
Menlo Park, CA 94025, USA
Tel: +1 (650) 325 3291
Fax: +1 (650) 325 5932
- **United Kingdom**
Eagle Close, Chandlers Ford
Eastleigh, Hants.
SO53 4NF, England
Tel: +44 (0) 2380 489000
Fax: +44 (0) 2380 489109
- **Deutschland GmbH**
Bensheimer Straße 61,
D-65428 Rüsselsheim-Königstädten,
Germany
Tel: +49 (0) 6142 9360 0
Fax: +49 (0) 6142 9360 50
- **France**
Rue Ampere,
Z.I. Lyon Nord,
69730 Genay, France
Tel: +33 (0)4 72 08 75 75
Fax: +33 (0)4 72 08 75 70
- **Italia**
Strada Statale 11 - N. 28,
20010 Vittuone (Milano), Italy
Tel: +39 02 90111105
Fax: +39 02 90111147
- **Japan**
2F ASK Bldg., 1-24-4, Ebisu,
Shibuya-ku, Tokyo, 150-0013, Japan
Tel: +81 3 449-7451
Fax: +81 3 440-2040
- **Taiwan**
5th Floor, No. 79, Sec 1,
Hsin Tai Wu Road, Hsi-Chih
Taipei Hsien, Taiwan, R.O.C.
Tel: +886 (2) 698-4013
Fax: +886 (2) 698-4021
- **China**
Beijing Wangfujing Century Square
No. 99 Wang Fu Jing Street #A526,
Dong Cheng District, Beijing, China 100006
Tel: +86 10-6525 6698
Fax: +86 10-6525 1639
- **Korea⁺**
5 Fl, Yang Chun Bldg,
330-11 Shinjung-Dong,
Yangchun-Ku, Seoul, Korea
Tel: +82 (2) 643-8833
Fax: +82 (2) 643-5539
- **Australia⁺**
Unit 1, 8 Grex Avenue,
Minchinbury 2770, NSW, Australia
Tel: +61 (2) 9832 8052
Fax: +61 (2) 9832 8045

+ Authorised OK Representative

Metcal reserves the right to alter design and specification without prior notice

Internet: www.metcal.com

Metcal is an OK International Company

Artisan Technology Group is an independent supplier of quality pre-owned equipment

Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

Learn more!

Visit us at [artisanTG.com](https://www.artisanTG.com) for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisanTG.com | [artisanTG.com](https://www.artisanTG.com)

